

Printer Driver Settings

CANON

For older CANON printer series, please use the media type setting "Glossy Photo Paper". For newer CANON printer series, please select "Photo Paper Pro / Professional Photo Paper" or "Photo Paper Glossy Plus". Under "Print Quality" "Custom" "Set..." set the print quality to Fine = 1 or "High".

Examples:

Printer	Paper setting	Quality	notes
iP 4200	Glossy Photo Paper Plus	high	
MP 610	Glossy Photo Paper Plus	high	
Pro 9000	Glossy Photo Paper Plus	standard	C, M, Y adjustment to minus

EPSON

For older EPSON printer series, please select "Photo Glossy Paper" as media type and set the print quality to "Superfine 1440 dpi" under "Advanced Mode" => "Custom Settings" => "More Settings". For newer EPSON printer series, please select "Photo Quality Glossy Film" or "Premium Glossy Photo Paper" as media type and a high print quality or "Photo" [Advanced Settings: "Mode" => "Custom" "Print Quality" => "1440 -2880 dpi" or "Photo". Note: "High-Speed" off at 720 dpi].

For Stylus with EPSON DURABrite™ printers, please select "Premium Semigloss Photo Paper" as media type and a high print quality or "Best Photo".

Examples:

Printer	Paper setting	Quality	notes
R 285	Epson Glossy	Photo	
RX 700	Premium Glossy Photo Paper	Photo	
R 200	Premium Glossy Photo Paper	Photo	
R 1900	Epson Glossy	Best photo	M setting below 0 C setting above 0

HEWLETT PACKARD

Please select "HP Premium Photo Paper, Glossy" or "HP Premium Plus Photo Paper, Glossy" and "Best" print quality.

Examples:

Printer	Paper setting	Quality	notes
Photosmart D 7360	HP Advanced Photo Paper	max. resolution	
Photosmart D 5460	HP Advanced Photo Paper	best	
Photosmart D9180	Hp Photo Paper	best	

LEXMARK

Under Paper Settings/ Media Type, please select "Glossy/Photo Paper" or "Gloss/Photo" and set print quality to "High", "Maximum" or "Best".